

1	APPLICATION.....	3
2	DESCRIPTION (FIG. A)	3
3	PACKAGE CONTENT LIST.....	3
4	SYMBOLS	4
5	GENERAL POWER TOOL SAFETY WARNINGS	5
5.1	<i>Work area</i>	5
5.2	<i>Electrical safety</i>	5
5.3	<i>Personal safety</i>	5
5.4	<i>Power tool use and care</i>	6
5.5	<i>Service</i>	6
6	ADDITIONAL SAFETY INSTRUCTIONS FOR LAWN MOWERS ..	6
7	ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS	8
7.1	<i>Batteries</i>	8
7.2	<i>Chargers</i>	8
8	CHARGING AND INSERTION OR REMOVAL OF BATTERY	8
8.1	<i>Charger indications</i>	8
8.2	<i>Inserting the battery in the machine (Fig. 1)</i>	9
8.3	<i>To remove battery pack or battery packs from the machine</i>	9
8.4	<i>Battery capacity indicator (Fig. A)</i>	10
9	ASSEMBLY	10
9.1	<i>Lower handle assembly</i>	10
9.2	<i>Upper handle assembly</i>	10
9.3	<i>Grass catcher assembly</i>	10
9.4	<i>Grass collection settings</i>	10
9.5	<i>Working depth setting (Fig. 10)</i>	10
10	OPERATION.....	11
10.1	<i>Starting/stopping the mower</i>	11
10.2	<i>Battery pack selection</i>	11
10.3	<i>Drive (Fig. 14)</i>	11
10.4	<i>For the best results when mowing</i>	11

10.5	<i>Emptying the grass catcher</i>	12
10.6	<i>End of the operation</i>	12
11	CLEANING AND MAINTENANCE	12
11.1	<i>Cleaning</i>	12
11.2	<i>Blade maintenance</i>	12
11.3	<i>Replacing the blade</i>	12
12	TECHNICAL DATA	13
13	NOISE	13
14	TROUBLESHOOTING	14
15	WARRANTY	15
16	ENVIRONMENT	15
17	DECLARATION OF CONFORMITY	16

LAWN MOWER 40 V 510 MM

POWDPG7568

1 APPLICATION

The purpose of this lawn mower is to cut grass. This lawn mower has been designed for cutting grass areas in a domestic garden. It is not designed for commercial use. Not suitable for professional use.



WARNING! For your own safety, read this manual and general safety instructions carefully before using the appliance. Your power tool should only be passed on together with these instructions.

2 DESCRIPTION (FIG. A)

- | | |
|------------------------------|---|
| 1. Self-drive control handle | 13. Battery cover |
| 2. Switch handle | 14. Selector (Battery 1 or Battery 2) |
| 3. Upper handle | 15. Battery support 1 |
| 4. Lower handle | 16. Battery support 2 |
| 5. Bracket | 17. Operation marker |
| 6. Motor cover | 18. Start button |
| 7. Key | 19. Battery pack (NOT INCLUDED) |
| 8. Switch box | 20. Battery pack release button |
| 9. Knobs | 21. Charger (NOT INCLUDED) |
| 10. Grass catcher | 22. Battery capacity indicator |
| 11. Height adjusting lever | 23. Button for battery capacity indicator |
| 12. Side discharge | |

3 PACKAGE CONTENT LIST

- Remove all packaging materials.
- Remove remaining packing and package inserts (if included).
- Check that the package contents are complete.
- Check the appliance, the power cord, the power plug and all accessories for transportation damage.
- Keep the packing materials as long as possible till the end of the warranty period. Dispose it into your local waste disposal system afterwards.



WARNING: Packaging materials are not toys! Children must not play with plastic bags! Danger of suffocation!



 













 




- | | |
|----------------------|-----------|
| 1x lawn mower | 2x clip |
| 1x key | 4x bolt |
| 1x grass catcher bag | 1x hook |
| 4x knob | 1x manual |



If any parts are missing or damaged, please contact your dealer.

4 SYMBOLS

In this manual and/or on the machine the following symbols are used:

	Denotes risk of personal injury or damage to the tool.		Read manual before use.
	Keep bystanders away.		Warning! Flying objects!
	Keep hands and feet away from sharp parts.		Switch off and remove isolator key before adjusting, cleaning and before leaving the product unattended for any period.
	Indicates electrical shock hazard!		Never operate the machine in the rain or in damp or wet conditions. Moisture is an electrical shock hazard.
	Wait until all machine components have completely stopped before touching them. The blades continue to rotate after the machine is switched off, a rotating blade can cause injury.	 	Wearing of eye protection advised. Wear noise protection.
	In accordance with essential safety standards of applicable European directives.		Class II - The machine is double insulated; Earthing wire is therefore not necessary (only for charger).
	Wear gloves.		Wearing of protective shoes advised.
	Do not expose charger and battery pack to water.		Do not incinerate battery pack or charger.
	Ambient temperature 40 °C max. (only for battery).		Use battery and charger only in closed rooms.
	Pay more attention to the operator's hands and feet to avoid injury.		Battery charger contains a safety transformer.



Do not touch a hot silencer or cylinder. You may get burned. These parts get extremely hot from operation. When turned off they remain hot for a short time.

5 GENERAL POWER TOOL SAFETY WARNINGS



Read all safety warnings and all instructions. Failure to follow all warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

5.1 *Work area*

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

5.2 *Electrical safety*

- Always check that the power supply corresponds to the voltage on the rating plate.
- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

5.3 *Personal safety*

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used whenever conditions require will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

5.4 Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or sticking of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to stick and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could lead to a hazardous situation.

5.5 Service

- Have your power tool serviced by a qualified person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

6 ADDITIONAL SAFETY INSTRUCTIONS FOR LAWN MOWERS

- This device should not be used by children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and maintenance may not be performed by children.
- This unit can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, on condition that they have been given supervision or instruction concerning the safe use of the equipment and understand the resulting risks.
- Familiarize yourself with the instructions and the proper use of the machine.
- Avoid wearing loose clothing or clothing with hanging cords or belts.
- Worn or damaged parts must be replaced.
- Be especially careful when turning the mower around and when pulling it towards you.
- Do not start the engine when the grass bag is not installed.
- Be aware that on machines with multiple cutting blades, the movement of a cutting diameter can lead to rotations of the other blades on it.
- When adjusting the machine make sure that no fingers are trapped between moving cutting knives and fixed parts of the machine.
- Allow the engine to cool before storing machine.
- When servicing the cutting blade, note that even if the power supply is switched off, the blades can still be moving.

- Replace worn or damaged parts for safety. Use only original spare parts and accessories.
- The machine should be operated with a tripping current not exceeding 30 mA via a residual current device (RCD).
- Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations may restrict the age of the operator.
- Never mow while people, especially children or pets, are nearby.
- The operator or user is responsible for accidents or hazards occurring to other people or their property.
- Do not operate the lawnmower when barefoot or wearing open sandals, always wear substantial footwear and long trousers.
- Thoroughly inspect the area where the lawnmower is to be used and remove all stones, sticks, wires, bones and other foreign objects.
- Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged.
- Replace worn or damaged blades and bolts in sets to preserve balance.
- Mow only in daylight or in good artificial light.
- Avoid operating the lawnmower in wet grass, where feasible.
- Walk, never run.
- Never operate the appliance with defective guards or shields, or without safety device, for example deflectors and/or grass catchers in place.
- Mowing on banks can be dangerous:
 - Do not mow excessively steep slopes.
 - Always be sure of your footing on slopes or wet grass.
 - Mow across the face of slopes – never up and down.
 - Exercise extreme caution when changing direction on slopes.
 - Use extreme caution when stepping back or pulling the lawnmower towards you.
 - Never mow by pulling the mower towards you.
- Stop the blades if the lawnmower has to be tilted for transportation when crossing surfaces other than grass and when transporting the lawnmower to and from the area to be mowed.
- Do not tilt the machine when starting or switching on the motor, except if the machine has to be tilted for starting in long grass. In this case, do not tilt it more than absolutely necessary and tilt only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the machine to the ground.
- Switch on the lawnmower according to instructions and with feet well away from the blades.
- Do not put hands or feet near or under rotating parts.
- Keep clear of discharge opening at all times.
- Never pick up or carry the lawnmower while the motor is running.
- Make sure that all moving parts have come to a complete stop.
 - whenever you leave the mower;
 - before you remove blockages or clear blockages in the ejection channel;
 - before checking, cleaning or working on the mower;
 - when a foreign object is hit. Look for damage to the lawn mower and perform the necessary repairs before restarting and operating the mower.
- If the lawnmower starts to vibrate abnormally, an immediate check is required.
 - check for obstructions;
 - perform the necessary repairs on damaged parts;
 - make sure that all nuts, bolts and screws are tightened.
- Keep all nuts, bolts and screws tight to be sure that the lawnmower is in safe working condition.
- Check the grass catcher frequently for wear or deterioration.

- Replace worn or damaged parts for safety.

7 ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS



Use only batteries and chargers applicable for this machine.

7.1 Batteries

- Never attempt to open for any reason.
- Do not store in locations where the temperature may exceed 40 °C.
- Charge only at ambient temperatures between 4 °C and 40 °C.
- Store your batteries in a cool dry place (5 °C-20 °C). Never store batteries in discharged state.
- It is better for Li-ion batteries to discharge and reload them regularly (at least 4 times a year). The ideal charge for long-term storage of your Li-ion battery is 40% of capacity.
- When disposing of batteries, follow the instructions given in the section "Protecting the environment".
- Do not cause short circuits. If connection is made between the positive (+) and negative (-) terminal directly or via accidental contact with metallic objects, the battery is short circuited and an intense current will flow causing heat generation which may lead to casing rupture or fire.
- Do not heat. If batteries are heated to above 100 °C, sealing and insulating separators and other polymer components may be damaged resulting in electrolyte leakage and/or internal short circuiting leading to heat generation causing rupture or fire. Moreover do not dispose of the batteries in fire, explosion and/or intense burning may result.
- Under extreme conditions, battery leakage may occur. When you notice liquid on the battery, proceed as follows:
 - Carefully wipe the liquid off using a cloth. Avoid skin contact.
 - In case of skin or eye contact, follow the instructions below:
 - ✓ Immediately rinse with water. Neutralize with a mild acid such as lemon juice or vinegar.
 - ✓ In case of eye contact, rinse abundantly with clean water for at least 10 minutes. Consult a physician.



Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery.

7.2 Chargers

- Never attempt to charge non-rechargeable batteries.
- Have defective cords replaced immediately.
- Do not expose to water.
- Do not open the charger.
- Do not probe the charger.
- The charger is intended for indoor use only.

8 CHARGING AND INSERTION OR REMOVAL OF BATTERY

8.1 Charger indications

Connect the charger to the power outlet socket:

- Solid green: ready to charge.
- Flickering red: charging.
- Solid green: charged.

- Solid green and red: battery or charger damaged.



Note: if the battery does not fit properly, disconnect it and confirm that the battery pack is the correct model for this charger as shown on the specification chart. Do not charge any other battery pack or any battery pack that does not securely fit the charger.

1. Frequently monitor the charger and battery pack while connected.
2. Unplug the charger and disconnect it from the battery pack when finished.
3. Allow the battery pack to cool completely before using it.
4. Store the charger and battery pack indoors, out of reach of children.



NOTE: If battery is hot after continuous use in the tool, allow it to cool down to room temperature before charging. This will extend the life of your batteries.

8.2 Inserting the battery in the machine (Fig. 1)



WARNING: Always remove battery pack (19) and key (7) from your tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack and key will prevent accidental starting that could cause serious personal injury.



NOTE: When using different Dual Power batteries, there may be differences in cutting performance.



Make sure to use fully charged batteries. Only use a Dual Power original battery in your machine.

Insert the battery in the machine. The battery should slide easily into the battery support on the machine. If the battery does not slide in easily, it is not being inserted correctly. The battery will lock itself into place when you hear a “click”. Make sure the battery is fitted correctly into the machine.



WARNING: Make sure the latch on the top of the battery pack snaps in place and the battery pack is fully seated and secure in the mower's battery port before beginning operation. Failure to securely seat the battery pack could cause the battery pack to fall out, resulting in serious personal injury.

8.3 To remove battery pack or battery packs from the machine

- Raise the motor cover.
- Press and hold the battery latch button at the top of the battery pack.
- Remove battery pack from the mower.



WARNING: To avoid serious personal injury, always remove the battery pack and key when carrying or transporting the tool.

8.4 Battery capacity indicator (Fig. A)

There are battery capacity indicators (22) on the battery pack, you can check the capacity status of the battery if you squeeze the button (23). Before using the machine, please press switch trigger to check if the battery is full enough for properly working.

Those 3 LED might show the status of the capacity level of the battery:

- 3 LED's are lit: Battery fully charged.
- 2 LED's are lit: Battery 60% charged.
- 1 LED is lit: Battery almost discharged.

9 ASSEMBLY

9.1 Lower handle assembly

Insert pin into the round hole (25) of the lower handle on both left and right side. (Fig. 2)

Insert the square neck bolt (24) into the bracket (5) and lower handle (4), then tighten with the knobs (9)



NOTE: The handle level (high, medium and low) (Fig. 3) can be adjusted by setting the square neck bolt (24) in one of the three holes on the bracket (5).

9.2 Upper handle assembly

- Insert the square neck bolt (24) into the lower handle (4) and the upper handle (3) in turn, then tighten with the knobs (9). (Fig. 4)
- Fasten the cables with the clips (Fig. 5) on the lower handle (4) making sure the cables pass on top of the handle support (5). Fastening the cable on the underside of the handle (4) may cause the cables to break when folding down the upper handle assembly (3).

9.3 Grass catcher assembly

Hold up the rear cover (26) and slide the clamps of the grass catcher (10) on the machine. (Fig. 6)

9.4 Grass collection settings

- 1 Rear discharging
 - a. Install the grass catcher (10).
 - b. Close the rear cover (26).
- 2 Side discharging
 - a. Close the rear cover (26).
 - b. Unlock the handle by pushing on the release mechanism. (Fig. 7)
 - c. Afterwards you can open the side cover (27) and install the discharge guard. (Fig. 8).
- 3 Mulching
 - a. Lift and hold up the rear cover (26), afterwards insert the mulching plug (28). (Fig. 9)
 - b. Close the rear cover.

9.5 Working depth setting (Fig. 10)

- Remove key (7) and battery pack (19).
- To raise the blade height, grasp the height adjustment lever (11) and move it toward the front of the mower.
- To lower the blade height, grasp the height adjustment lever (11) and move it toward the back of the mower.

10 OPERATION

10.1 Starting/stopping the mower

- Insert the battery or batteries in the machine. (Fig. 1)
- Insert the key (7) inside the machine. You will hear a “click” noise when the key is inserted correctly. (Fig. 11)
- Set the selector switch (14) in the correct position. (I or II, depending on the battery pack (19) you want to use). (Fig. 12)
- Hold the start button (18) and pull the switch handle (2) to the soft grip part of the upper handle (4). When the engine is running you can release the start button (18). (Fig. 13)
- To stop the mower, release the switch handle (2).

10.2 Battery pack selection

When one battery runs out, the engine will stop working. Switch the selector to position I or II and re-start the machine. (Fig. 12)

10.3 Drive (Fig. 14)

Forward drive is engaged when you push the self-drive control handle (1) towards the handle bar.

Forward drive is disengaged when releasing the control handle away from the handle bar.

10.4 For the best results when mowing

Clear lawn of debris. Be sure that the lawn is clear of stones, sticks, wire or other foreign objects which could be accidentally thrown out by the mower in any direction and cause serious personal injury to the operator and others as well as damage to property and surrounding objects. Do not cut wet grass. For effective mowing do not cut wet grass because it tends to stick to the underside of the deck preventing proper mowing of the grass clippings. Cut no more than 1/3 the length of the grass. The recommended cut for mowing is 1/3 the length of the grass. Ground speed will need to be adjusted so the clippings can be dispersed evenly into the lawn. When mowing long grass you may have to cut the lawn in two passes, lowering the blade another 1/3 of the length for the second cut and perhaps cutting in a different pattern than was used the first time. Overlapping the cut a little on each pass will also help to clean up any stray clippings left on the lawn. Clean underside of deck.

Be certain to clean the underside of the cutting deck after each use to avoid a build-up of grass, which would prevent proper mulching. Mowing leaves. The mowing of leaves can also be beneficial to your lawn. When mowing leaves make sure they are dry and are not laying too thick on the lawn.

Do not wait for all the leaves to be off the trees before you mow.



WARNING: if you strike a foreign object, stop the engine and wait until cutting device has come to a complete standstill. Thoroughly inspect the mower for any damage and repair the damage before restarting and operating the mower. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.



CAUTION! The blade starts turning as soon as the motor is started.



WARNING! Cutting elements continue to rotate after the motor is switch off.

10.5 Emptying the grass catcher

You need to empty the grass catcher (10) when the indicator cap is closed.

To empty the grass catcher:

- Release the switch handle (2).
- Lift up the rear cover.
- Remove the grass catcher (10) by the handle.
- Empty the grass catcher.

10.6 End of the operation

- Release the switch handle (2) to stop the machine.
- Remove the key (7).
- Press the battery pack release button (20) and remove the battery pack (19) from the machine.
- Remove any grass build-up from the machine.

11 CLEANING AND MAINTENANCE

11.1 Cleaning

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the device immediately each time you have finished using it.
- Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device.
- Always remove the battery pack before repair, cleaning or maintenance work. After 5 hours running time, tighten screws and nuts. Clean mower thoroughly after each mowing with cloth or brush.



Never use solvents such as petrol, alcohol, ammonia water, etc. These solvents may damage the plastic parts.

11.2 Blade maintenance

- Regularly remove grass and dirt from the blade.
- At the beginning of the gardening season, carefully examine the condition of the blade.
- If the blade is very blunt, sharpen or replace the blade.
- If the blade is damaged or worn, fit a new blade.

If the blade is slipping, put the screwdriver into the location hole, tighten the blade by wrench.



Warning! Observe the following precautions:

- Be careful not to cut yourself. Use heavy-duty gloves or a cloth to grip the blade.
- Only use the specified replacement blade.
- Do not remove the impeller for any reason.

11.3 Replacing the blade

For safety reasons, we recommend having the blade replaced by an authorized professional.



Important: Wear work gloves!

12 TECHNICAL DATA

Type	POWDPG7568
Voltage	40 V
Rotation speed	3,000-3,500 min-1
Cutting width	510 mm
Protection class	Class III
Protection degree	IPX1
Collect box	70 l
Cutting height	30-80 mm
Material housing	Steel
Grass box material	Nylon with plastic top cover
Number of height positions	6
Engine type	Brushless
Diameter front wheel	203 mm
Diameter rear wheel	279 mm
Central adjustable handle height	Yes
Foldable handle	Yes
Rear discharge	Yes
Collecting	Yes

13 NOISE

Noise emission values measured according to relevant standard. (K=3)




Acoustic pressure level LpA	75 dB(A)
Acoustic power level LwA	98 dB(A)



ATTENTION! Wear hearing protection when sound pressure is over 85 dB(A).

aw (Vibration)	4.1 m/s ²	K = 1.5 m/s ²
----------------	----------------------	--------------------------

14 TROUBLESHOOTING

PROBLEM	LIKELY CAUSE		SOLUTION
Buzz lasts for 30 s	Low voltage protection	Continuous long beep 	Charge the battery.
Buzz appears two times per second and lasts for 30 s	Locked-rotor protection	Intermittent same beep 	Restart the machine.
Long and short buzz alternately appears in one second and lasts for 30 s	Temperature protection	Alternate long and short beep 	Restart the machine after the temperature drops.
Not working	Low battery voltage.		Charging the battery.
	The switch line is not connected correctly		Reconnect the switch line.
	Battery pack selector switch selection error when there is only one battery pack.		Re selection.
	Battery pack is not installed in place correctly.		Reinstall the battery pack.
	Not inserted key.		Insert key.

15 WARRANTY

- This product is warranted for a 36-month period effective from the date of purchase by the first user.
- This warranty covers all material or production flaws excluding : batteries, chargers, defective parts subject to normal wear & tear such as bearings, brushes, cables, and plugs, or accessories such as drills, drill bits, saw blades, etc. ; damage or defects resulting from maltreatment, accidents or alterations; nor the cost of transportation.
- Damage and/or defects resulting from inappropriate use also do not fall under the warranty provisions.
- We also disclaim all liability for any bodily injury resulting from inappropriate use of the tool.
- Repairs may only be carried out by an authorised customer service centre for Powerplus tools.
- You can always obtain more information at the number 00 32 3 292 92 90.
- Any transportation costs shall always be borne by the customer, unless agreed otherwise in writing.
- At the same time, no claim can be made on the warranty if the damage of the device is the result of negligent maintenance or overload.
- Definitely excluded from the warranty is damage resulting from fluid permeation, excessive dust penetration, intentional damage (on purpose or by gross carelessness), inappropriate usage (use for purposes for which the device is not suitable), incompetent usage (e.g. not following the instructions given in the manual), inexpert assembly, lightning strike, erroneous net voltage. This list is not exhaustive.
- Acceptance of claims under warranty can never lead to the prolongation of the warranty period nor commencement of a new warranty period in case of a device replacement.
- Devices or parts which are replaced under the warranty therefore remain the property of Varo NV.
- We reserve the right to reject a claim whenever the purchase cannot be verified or when it is clear that the product has not been properly maintained. (Clean ventilation slots, carbon brushes serviced regularly, etc.).
- Your purchase receipt must be kept as proof of date of purchase.
- Your appliance must be returned undismantled to your dealer in an acceptably clean state, (in its original blow-moulded case if applicable to the unit), accompanied by proof of purchase.
- Your tool must be charged at least 1x per month to ensure optimal operation of this tool.

16 ENVIRONMENT



Should your appliance need replacement after extended use, do not dispose of it with the household refuse, but in an environmentally safe way.

Waste produced by electrical machine items should not be handled like normal household rubbish. Please recycle where recycle facilities exist. Check with your Local Authority or retailer for recycling advice.

17 DECLARATION OF CONFORMITY



VARO – Vic. Van Rompuy N.V. - Joseph Van Instraat 9 - BE2500 Lier - BELGIUM,
declares that,

product: Lawnmower – Battery operated
trade mark: PowerPlus
model: POWDPG7568

is in conformity with the essential requirements and other relevant provisions of the applicable European Directives, based on the application of European harmonized standards. Any unauthorized modification of the apparatus voids this declaration.

European Directives (including, if applicable, their amendments up to the date of signature):

2011/65/EU

2006/42/EC

2014/30/EU

2000/14/EC

Annex VI

LwA

Measured

90 dB(A)

Guaranteed

98 dB(A)

Notified Body

0197 - TÜV Rheinland

LGA Products GmbH

European harmonized standards (including, if applicable, their amendments up to the date of signature):

EN603335-1 : 2012

EN60335-2-77: 2010

EN55014-1 : 2017

EN55014-2 : 2015

Keeper of the Technical Documentation: Philippe Vankerhove, VARO – Vic. Van Rompuy N.V.

The undersigned acts on behalf of the company CEO,

Ludo Mertens
Regulatory Affairs – Compliance Manager
29/09/2020, Lier - Belgium